ESP-WROOM-02

Datasheet



Version 3.4 Espressif Systems Copyright © 2022

About This Guide

This document provides introduction to the specifications of ESP-WROOM-02 hardware.

Release Notes

Date	Version	Release notes
2015.12	V0.5	First release.
2016.01	V0.6	Updated Section 3.2.2.
2016.02	V0.7	Added Appendix—Notices.Updated Chapter 1.
2016.04	V0.8	Updated the flash size and PAD (bottom) size.
2016.06	V0.9	Updated the flash size.
2016.06	V1.0	Added Appendix—Notices—B.5.Updated Figure 2-1.
2016.08	V1.1	Updated the operating temperature range.
2016.11	V1.2	Added Appendix—Learning Resources.Added "ESP-WROOM-02 Peripheral Schematics" in Chapter 5.
2016.11	V2.0	Added Section 4.8 "Electrostatic Discharge".Updated Figure 5-1. ESP-WROOM-02 Schematics.
2016.12	V2.1	 Changed the minimum working voltage from 3.0 V to 2.5 V. Changed the power consumption during Deep-sleep from 10 μA to 20 μA.
2017.02	V2.2	Updated Section 3.3.
2017.04	V2.3	 Added the module's dimensional tolerance; Changed the input impedance value in Table 4-4 and 4-5 from 50 Ω to 39 + j6 Ω; Added Figure 4-1 Reflow Profile.
2017.09	V2.4	 Added Documentation Change Notification and the official link for downloading Product Certificates; Updated the supply voltage to 2.7 V ~ 3.6 V; Updated Figure 2-1 ESP-WROOM-02 Pin Layout and added a note to it; Updated Chapter 4: Collated electrical-characteristics-related data into Table 4-1; collated Wi-Fi-radio-related data into Table 4-2 and updated the output power parameters; Updated Chapter 5 Schematics and added a note; Added Chapter 6 Dimensions. Deleted Appendix B-Notices.
2017.10	V2.5	Updated the note to ESP-WROOM-02 Peripheral Schematics in Chapter 5.

Date	Version	Release notes
2018.03	V2.6	 Deleted the note in Chapter 1; Deleted the "RF certification" column and added a new "Certificates" section with all acquired certifications listed in Table 1-1; Updated Section 3.1 and Section 3.2; Updated Figure 4-1.
2018.04	V2.7	Deleted the "Bluetooth certification" part in Table 1-1.
2018.06	V2.8	Updated Figure 1-1 and Figure 6-1;Updated Chapter 1 for module size.
2018.08	V2.9	 Updated Chapter 1 for module size, and add information of reliability test items; Updated Figure 6-1 Dimensions of ESP-WROOM-02; Added Chapter 7 Recommended PCB Land Pattern; Updated the cover page.
2019.08	V3.0	Updated Chapter 6 Peripheral Schematics.
2019.12	V3.1	Added a note for the reflow profile;Added feedback links.
2020.07	V3.2	Updated Note in Chapter 6;Updated links in Appendix.
2021.08	V3.3	Added the "Not Recommended For New Designs (NRND)" watermark and footers.
2022.03	V3.4	Added a link to RF certification in Table 1-1

Documentation Change Notification

Espressif provides email notifications to keep customers updated on changes to technical documentation. Please subscribe at <u>https://www.espressif.com/en/subscribe</u>.

Certification

Download certificates for Espressif products from https://www.espressif.com/en/certificates.

Table of Contents

1.	Overv	iew1			
2.	. Pin Description3				
3.	Funct	ional Description5			
	3.1.	MCU			
	3.2.	Memory5			
		3.2.1. Internal SRAM and ROM5			
		3.2.2. SPI Flash			
	3.3.	Crystal Oscillator			
	3.4.	Interface Description			
4.	Electr	ical Characteristics8			
	4.1.	Electrical Characteristics			
	4.2.	Wi-Fi Radio8			
	4.3.	Power Consumption			
	4.4.	Reflow Profile			
	4.5.	Electrostatic Discharge11			
5.	Scher	natics12			
6.	Peripł	heral Schematics13			
7.	Dimer	nsions14			
8.	Recor	mmended PCB Land Pattern15			
A.	Apper	ndix—Learning Resources16			
	A.1.	Must-Read Documents			
	A.2.	Must-Have Resources17			



1.

Overview

Espressif provides the SMD module—ESP-WROOM-02 that integrates ESP8266EX. The module has been adjusted to get the best RF performance. We recommend using ESP-WROOM-02 for tests or for further development.

Dote:

For more information on ESP8266EX, please refer to ESP8266EX Datasheet.

The module size is (18.00 ± 0.10) mm x (20.00 ± 0.10) mm x (2.80 ± 0.10) mm. The type of flash used on this module is an SPI flash with a package size of SOP 8-150 mil. The gain of the on-board PCB antenna is 2 dBi.

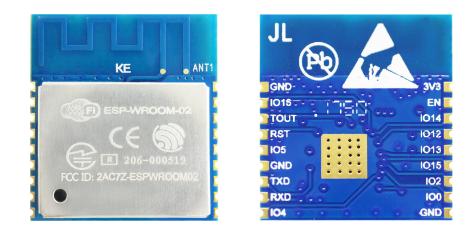


Figure 1-1. ESP-WROOM-02 Module



Categories	Items	Specifications		
	RF certification	See certificates for ESP-WROOM-02		
Certification	Wi-Fi certifaction	Wi-Fi Alliance		
	Green certification	RoHS, REACH		
Test	Reliablity	HTOL/HTSL/uHAST/TCT/ESD		
Wi-Fi	Wi-Fi protocols	802.11 b/g/n		
	Frequency range	2.4 GHz ~ 2.5 GHz (2400 MHz ~ 2483.5 MHz)		
	Peripheral interface	UART/HSPI/I2C/I2S/IR Remote Control		
	Penpheral Interface	GPIO/PWM		
	Operating voltage	2.7 V ~ 3.6 V		
	Operating current	Average: 80 mA		
Hardware	Minimum current delivered by power supply	500 mA		
	Operating temperature range	−40 °C ~ 85 °C		
	Storage temperature	−40 °C ~ 85 °C		
	Package size	(18.00 \pm 0.10) mm x (20.00 \pm 0.10) mm x (2.80 \pm 0.10) mm		
	External interface	-		
	Wi-Fi mode	Station/SoftAP/SoftAP + Station		
	Security	WPA/WPA2		
	Encryption	WEP/TKIP/AES		
Software	Firmware upgrade	UART Download/OTA (via network)/Download and write firmware via host		
	Software development	Supports Cloud Server Development/SDK for custom firmware development		
	Network protocols	IPv4, TCP/UDP/HTTP/FTP		
	User configuration	AT Instruction Set, Cloud Server, Android/iOS app		

Table 1-1. ESP-WROOM-02 Specifications



Pin Description


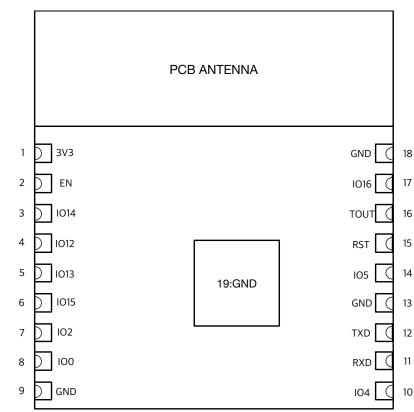


Figure 2-1 shows the pin distribution of the ESP-WROOM-02.



ESP-WROOM-02 has 18 pins. Please see the pin definitions in Table 2-1.

Table 2-1.	ESP-WROOM-02	Pin Definitions

No.	Pin Name	Functional Description			
		3.3 V power supply (VDD)			
1	3V3	III Note:			
		It is recommended the maximum output current a power supply provides be of 500 mA or above.			
2	EN	Chip enable pin. Active high.			
3	IO14	GPI014; HSPI_CLK			
4	IO12	GPI012; HSPI_MISO			
5	IO13	GPI013; HSPI_MOSI; UART0_CTS			



No.	Pin Name	Functional Description				
6	IO15	GPIO15; MTDO; HSPICS; UART0_RTS Pull down.				
7	102	GPIO2; UART1_TXD Floating (internal pull-up) or pull up.				
8	100	GPIO0UART download: pull down.Flash boot: floating or pull up.				
9	GND	GND				
10	IO4	GPIO4				
11	RXD	UART0_RXD, receive end in UART download; GPIO3				
12	TXD	UART0_TXD, transmit end in UART download, floating or pull up; GPIO1				
13	GND	GND				
14	105	GPI05				
15	RST	Reset				
16	TOUT	It can be used to test the power-supply voltage of VDD3P3 (Pin3 and Pin4) and the input power voltage of TOUT (Pin6). These two functions cannot be used simultaneously.				
17	IO16	GPIO16; used for Deep-sleep wake-up when connected to RST pin.				
18	GND	GND				



Functional Description

3.1. MCU

ESP8266EX integrates a Tensilica L106 32-bit RISC processor, which achieves extra-low power consumption and reaches a maximum clock speed of 160 MHz. The Real-Time Operating System (RTOS) and Wi-Fi stack allow 80% of the processing power to be available for user application programming and development. The CPU includes the interfaces as below.

- Programmable RAM/ROM interfaces (iBus), which can be connected with memory controller, and can also be used to visit flash.
- Data RAM interface (dBus), which can connected with memory controller.
- AHB interface which can be used to visit the register.

3.2. Memory

3.2.1. Internal SRAM and ROM

ESP8266EX Wi-Fi SoC integrates memory controller and memory units including SRAM and ROM. MCU can access the memory units through iBus, dBus, and AHB interfaces. All memory units can be accessed upon request, while a memory arbiter will decide the running sequence according to the time when these requests are received by the processor.

According to our current version of SDK, SRAM space available to users is assigned as below.

- RAM size < 50 kB, that is, when ESP8266EX is working under the Station mode and connects to the router, programmable space accessible in heap + data section is around 50 kB.
- There is no programmable ROM in the SoC, therefore, user program must be stored in an external SPI flash.

3.2.2. SPI Flash

ESP8266EX uses external SPI flash to store user programs, and supports up to 16 MB memory capacity theoretically.

ESP-WROOM-02 currently integrates a 2-MB SPI flash. ESP-WROOM-02 supports these SPI modes: Standard SPI, DIO (Dual I/O), DOUT (Dual Output), QIO (Quad I/O) and QOUT (Quad Output).



3.3. Crystal Oscillator

ESP-WROOM-02 uses a 26-MHz crystal oscillator. The accuracy of the crystal oscillator should be ± 10 PPM.

When using the download tool, please select the right type of crystal oscillator. In circuit design, capacitors C1 and C2 which connect to the earth are added to the input and output terminals of the crystal oscillator respectively. The values of the two capacitors can be flexible, ranging from 6 pF to 22 pF, however, the specific capacitive values depend on further testing of, and adjustment to, the overall performance of the whole circuit. Normally, the capacitive values of C1 and C2 are within 10 pF for the 26-MHz crystal oscillator.

3.4. Interface Description

Interface	Pin	Functional Description
HSPI	IO12 (MISO), IO13 (MOSI), IO14 (CLK), IO15 (CS)	Connects to SPI Flash, display screen, and MCU.
PWM	IO12 (R), IO15 (G), IO13 (B)	Currently the PWM interface has four channels, but users can extend it to eight channels. PWM interface can realize the control of LED lights, buzzers, relays, electronic machines, etc.
IR	1014 (IR_T), 105 (IR_R)	The functionality of the infrared remote control interface can be realized via software programming. The interface uses NEC coding, modulation, and demodulation. The frequency of the modulated carrier signal is 38 kHz.
ADC	тоит	Tests the power supply voltage of VDD3P3 (Pin3 and Pin4) and the input power voltage of TOUT (Pin6). However, these two functions cannot be used simultaneously. This interface is typically used in sensors.
12C	1014 (SCL), 102 (SDA)	Connects to external sensors and display screens, etc.
		Communicates with the UART device.
		Downloading: U0TXD + U0RXD or GPIO2 + U0RXD
	UARTO: TXD (U0TXD), RXD (U0RXD), IO15 (RTS), IO13 (CTS) UART1: IO2 (TXD)	Communicating: (UART0): U0TXD, U0RXD, MTDO (U0RTS), MTCK (U0CTS)
UART		Debugging: UART1_TXD (GPIO2) can be used to print debugging information.
		By default, UARTO will output some printed information when you power on ESP8266EX. If this issue influences some specific applications, users can exchange the inner pins of UART when initializing ESP8266EX, that is, exchange U0TXD and U0RXD with U0RTS and U0CTS. Users can connect MTDO and MTCK to the serial port of the external MCU to realize the communication.

Table 3-1. Interface Description

2022.03



Interface	Pin	Functional Description
I2S	I2S input: IO12 (I2SI_DATA) ; IO13 (I2SI_BCK); IO14 (I2SI_WS); I2S output: IO15 (I2SO_BCK); IO3 (I2SO_DATA); IO2 (I2SO_WS).	Collects, processes and transmits audio data.



Electrical Characteristics

Dote:

Unless otherwise specified, measurements are based on VDD = 3.3 V, TA = 25 °C.

4.1. Electrical Characteristics

Parameter	Symbol	Min	Тур	Max	Unit
Storage temperatue	-	-40	Normal	85	°C
Operating temperature	-	-40	20	85	°C
Maximum soldering temperature (Condition: IPC/JEDEC J-STD-020)	-	-	-	260	°C
Supply voltage	VDD	2.7	3.3	3.6	V
Input logic level low	VIL	-0.3	-	0.25 VDD	V
Input logic level high	VIH	0.75 VDD	-	VDD + 0.3	V
Output logic level low	V _{OL}	-	-	0.1 VDD	V
Output logic level high	Voн	0.8 VDD	-	-	V

Table 4-1. Electrical Characteristics

4.2. Wi-Fi Radio

Table 4-2. Wi-Fi Radio Characteristics

Description	Min	Тур	Max	Unit
Input frequency	2412	-	2484	MHz
Input reflection	-	-	-10	dB
	Output Pov	ver		
PA output power at 72.2 Mbps	13	14	15	dBm
PA output power in 11b mode	19.5	20	20.5	dBm
	Sensitivit	у		
DSSS, 1 Mbps	-	-98	-	dBm
CCK, 11 Mbps	-	-91	-	dBm



Description	Min	Тур	Max	Unit
CCK, 11 Mbps	-	-91	-	dBm
6 Mbps (1/2 BPSK)	-	-93	-	dBm
54 Mbps (3/4 64-QAM)	-	-75	-	dBm
HT20, MCS7 (65 Mbps, 72.2 Mbps)	-	-72	-	dBm
	Adjacent chann	el rejection		
OFDM, 6 Mbps	-	37	-	dB
OFDM, 54 Mbps	-	21	-	dB
HT20, MCS0	-	37	-	dB
HT20, MCS7	-	20	-	dB

4.3. Power Consumption

The following power consumption data were obtained from the tests with a 3.3 V power supply and a voltage stabilizer, in 25 °C ambient temperature. All data are based on 50% duty cycle in continuous transmission mode.

Table 4-3.	Power	Consumption
------------	-------	-------------


Modes	Min	Тур	Max	Unit
Tx 802.11 b, CCK 11 Mbps, Pout = +17 dBm	-	170	-	mA
Tx 802.11 g, OFDM 54 Mbps, Pout = +15 dBm	-	140	-	mA
Tx 802.11 n, MCS7, Pout = +13 dBm	-	120	-	mA
Rx 802.11 b, 1024 bytes packet length, -80 dBm	-	50	-	mA
Rx 802.11 g, 1024 bytes packet length, -70 dBm	-	56	-	mA
Rx 802.11 n, 1024 bytes packet length, -65 dBm	-	56	-	mA
Modem-sleep ①	-	15	-	mA
Light-sleep(2)	-	0.9	-	mA
Deep-sleep3	-	20	-	μΑ
Power Off	-	0.5	-	μΑ



Dotes:

- ① Modem-sleep is used when such applications as PWM or I2S require the CPU to be working. In cases where Wi-Fi connectivity is maintained and data transmission is not required, the Wi-Fi Modem circuit can be shut down to save power, according to 802.11 standards (such as U-APSD). For example, in DTIM3, when ESP8266EX sleeps for 300 ms and wakes up for 3 ms to receive Beacon packages from AP, the overall average current consumption is about 15 mA.
- ② Light-sleep is used for applications whose CPU may be suspended, such as Wi-Fi switch. In cases where Wi-Fi connectivity is maintained and data transmission is not required, Wi-Fi Modem circuit and CPU can be shut down to save power, according to 802.11 standards (such as U-APSD). For example, in DTIM3, when ESP8266EX sleeps for 300 ms and wakes up for 3 ms to receive Beacon packages from AP, the overall average current consumption is about 0.9 mA.
- ③ Deep-sleep is for applications that do not require Wi-Fi connectivity and only transmit data over long time lags, e.g., a temperature sensor that measures temperature every 100 s. For example, when ESP8266EX sleeps for 300 s then wakes up to connect to AP (taking about 0.3 ~ 1 s), the overall average current consumption is far less than 1 mA. The current consumption of 20 µA was obtained at the voltage of 2.5 V.

4.4. Reflow Profile

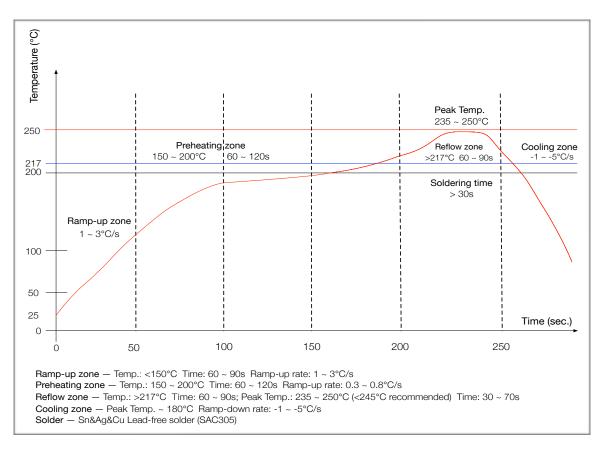





Dote:

Solder the module in a single reflow. If the PCBA requires multiple reflows, place the module on the PCB during the final reflow.


4.5. Electrostatic Discharge

Table 4-4. Electrostatic Discharge Parameters

Name	Symbol	Reference	Level	Max	Unit
Electrostatic Discharge (Human - Body Model)	Vesd (HBM)	Temperature: 23 ± 5 °C Based on ANSI/ESDA/JEDEC JS - 001 - 2014	2	2000	
Electrostatic Discharge (Charged - Device Model)	Vesd (CDM)	Temperature: 23 ± 5 °C Based on JEDEC EIA/JESD22 - C101F	C2	500	- V



Schematics

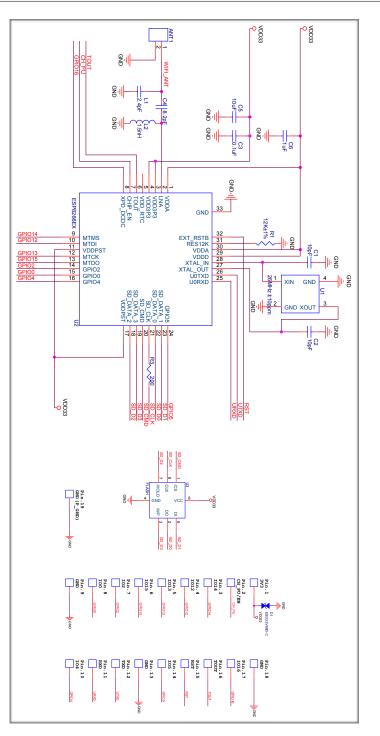





Peripheral Schematics

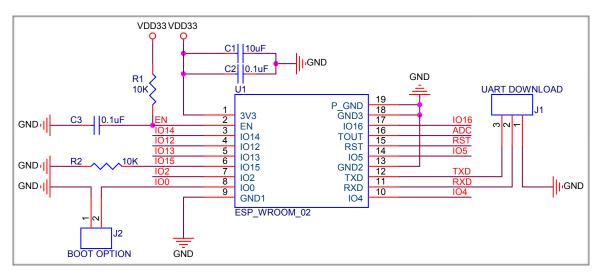


Figure 5-2. ESP-WROOM-02 Peripheral Schematics

Dote:

- 1. Soldering Pad 19 to the Ground of the base board is not necessary for a satisfactory thermal performance. If users do want to solder it, they need to ensure that the correct quantity of soldering paste is applied.
- 2. To ensure the power supply to the ESP8266EX chip during the power-up, it is advised to add an RC delay circuit at the EN pin. The recommended setting for the RC delay circuit is usually $R = 10 k\Omega$ and C = 0.1 uF. However, specific parameters should be adjusted based on the power-up timing of the module and the power-up and reset timing of the ESP8266 chip. For ESP8266EX's Power-up and Reset Timing Diagram, please refer to Electrical Characteristics in <u>ESP8266EX Datasheet</u>.
- 3. To improve module's anti-inference capability, it is advised to reserve an RC delay circuit at the RST pin. The recommended setting for the RC delay circuit is usually $R=10 \text{ k}\Omega$ and C=0.1 uF.





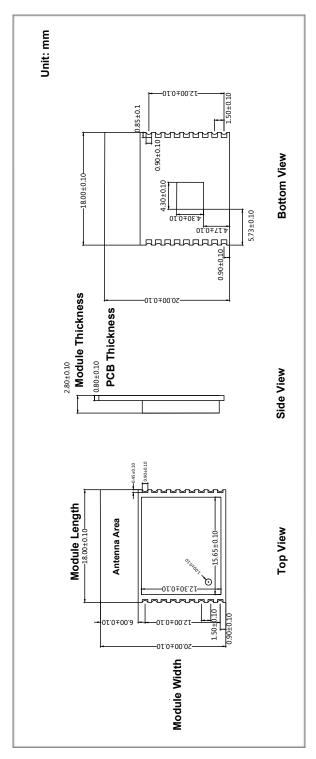


Figure 6-1. Dimensions of ESP-WROOM-02

Not Recommended For New Designs (NRND) 14/18 Submit Documentation Feedback

2022.03

2022.03



8.

Recommended PCB Land Pattern

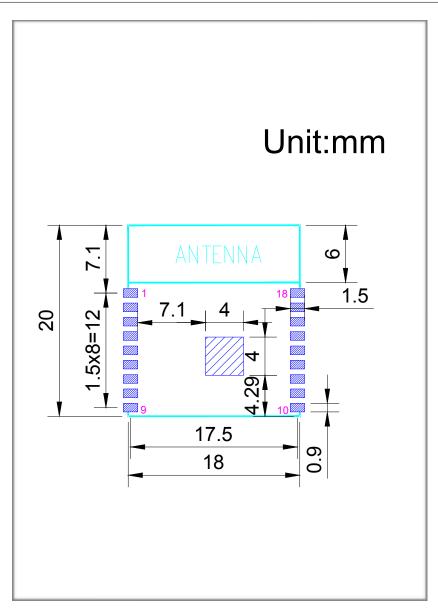


Figure 7-1. Recommended PCB Land Pattern of ESP-WROOM-02



A

Appendix – Learning Resources

A.1. Must-Read Documents

• ESP8266 Quick Start Guide

Description: This document is a quick user guide to getting started with ESP8266. It includes an introduction to the ESP-LAUNCHER, how to download firmware on to the board and run it, how to compile the AT application, structure and the debugging method of RTOS SDK. Basic documentation and other related resources for the ESP8266 are also provided.

• ESP8266 SDK Getting Started Guide

Description: This document takes ESP-LAUNCHER and ESP-WROOM-02 as examples to introduce how to use ESP8266 SDK. The contents include preparations before compilation, SDK compilation and firmware download.

• ESP-WROOM-02 PCB Design and Module Placement Guide

Description: The ESP-WROOM-02 module is designed to be soldered to a host PCB. This document compares six different placements of the antenna on a host board and provides notes on designing PCB.

• ESP8266 Hardware Resources

Description: This zip package includes manufacturing specifications of the ESP8266 board and the modules, manufacturing BOM and schematics.

• ESP8266 AT Command Examples

Description: This document introduces some specific examples of using Espressif AT commands, including single connection as a TCP Client, UDP transmission and transparent transmission, and multiple connection as a TCP server.

• ESP8266 AT Instruction Set

Description: This document provides lists of AT commands based on ESP8266_NONOS_SDK, including user-defined AT commands, basic AT commands, Wi-Fi AT commands and TCP/IP-related AT commands. It also introduces the downloading of AT firmware into flash.

• TCP/UDP UART Passthrough Test Demonstration

Description: This guide is intended to help users run a TCP & UDP passthrough test on the ESP8266 IoT platform.

• <u>FAQ</u>



A.2. Must-Have Resources

• ESP8266 SDKs

Description: This website page provides links to the latest version of ESP8266 SDK and the older ones.

• ESP8266 Tools

Description: This website page provides links to the ESP8266 flash download tools and ESP8266 performance evaluation tools.

- <u>ESP8266 App</u>
- ESP8266 Certification and Test Guide
- <u>ESP8266 BBS</u>
- ESP8266 Resources



Espressif IoT Team www.espressif.com

Disclaimer and Copyright Notice

Information in this document, including URL references, is subject to change without notice.

THIS DOCUMENT IS PROVIDED AS IS WITH NO WARRANTIES WHATSOEVER, INCLUDING ANY WARRANTY OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR ANY PARTICULAR PURPOSE, OR ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION OR SAMPLE.

All liability, including liability for infringement of any proprietary rights, relating to use of information in this document is disclaimed. No licenses express or implied, by estoppel or otherwise, to any intellectual property rights are granted herein.

The Wi-Fi Alliance Member logo is a trademark of the Wi-Fi Alliance. The Bluetooth logo is a registered trademark of Bluetooth SIG.

All trade names, trademarks and registered trademarks mentioned in this document are property of their respective owners, and are hereby acknowledged.

Copyright © 2022 Espressif Inc. All rights reserved.